




Introduction:


This document explains the installation for the Instromet Humidity Sensor for use with the Climatica Weather Station

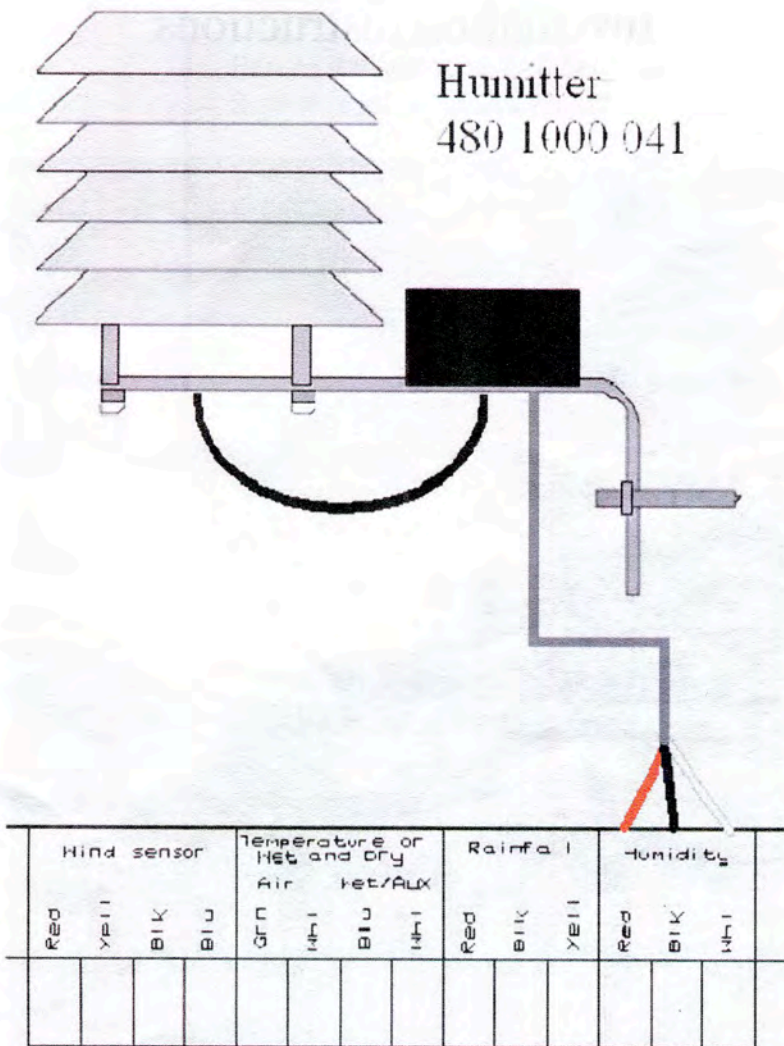

Installation Instructions:

This unit can be wall or mast mounted. It should be fitted where there is free movement of air and away from heater /ventilation outlets, chimneys, warm walls. Avoid mounting over flat roofs which may radiate heat during sunny periods.

The below image shows the wiring diagram for the cable connections to the sensor terminal block:

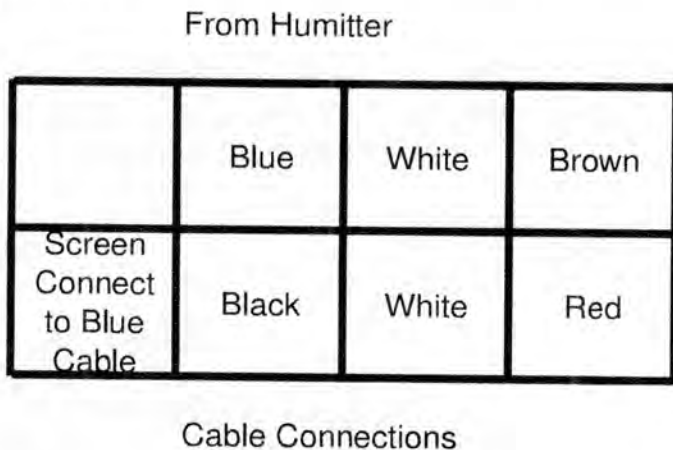

Operating Instructions

Firstly ensure that the rear “dip” switch on the weather station display is set to “Humitter”

The “multi Weather Display” of the Climatica Weather station will then display the humidity reading automatically when the sensor is detected upon installation.

Trouble shooting guide:

Humidity not being displayed:

Check the cables connections to ensure they are all firmly and correctly made.

Ensure the rear "dip" switch on the weather Station is set to "Humitter"

Power the system down and leave for 30 seconds before powering up again to ensure the auto detection is operating correctly.

Instromet Weather Systems Ltd
10b Lyngate Industrial Estate
North Walsham
Norfolk
NR28 0AJ

Web: www.instromet.co.uk
E-mail: Sales@instromet.co.uk
Tel: ++44 (0)1692 502800